

Measuring Connector Length

01.


Start the measuring tape on the inside of the cuff, just under the band.

02.

Hold connector so that it is straight and in-shape. There is no need to pull or tighten the connector. Hold the tape measure across the length to measure.

03.

Finish the measuring tape on the inside of the cuff, just under the band. In this case, the connector is 1,200mm (47" ≈)

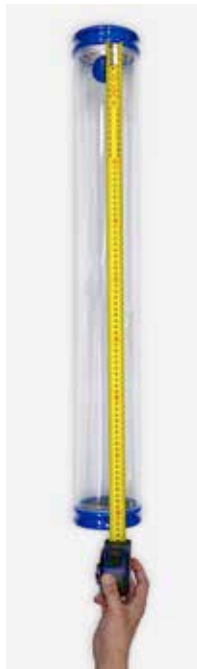

TOLERANCES

All connectors are cut and welded individually to ensure quality. There can be a slight variation on length within the tolerances listed below.

Length: 80mm - 250mm (3" - 10" ≈) tolerance: -0mm to +5mm (-0" - + $\frac{13}{64}$ " ≈)

Length: 300mm - 800mm (12" - 31" ≈) tolerance: -0mm to +10mm (-0" - + $\frac{25}{64}$ " ≈)

Length: 800mm+ (31"+ ≈) tolerance: -0mm to +20mm (-0" - + $\frac{25}{32}$ " ≈)

BFM® Global makes no warranty of any kind, expressed or implied, except that goods sold shall be of merchantable quality, free of manufacturing defect, and the buyer assumes all risk and liability resulting from the use of the goods, whether used singly or in combination with other products.

NB: Measurements given in mm are exact, those given in inches are approximate conversions only