



Tool Release (TR) Connectors

Installation:




01.

Ensure the BFM® spigot is clean and dry.



02.

Seat the back of the connector into the BFM® spigot and release. The cuff will snap into the spigot.

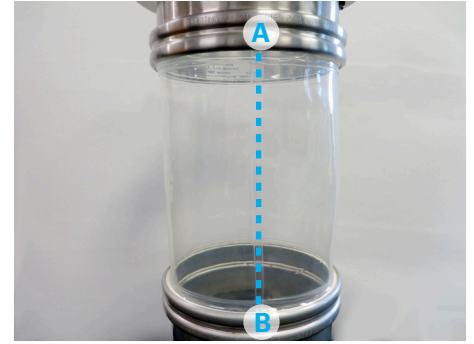

03.

Snap into the second spigot, **ensuring that the welded seam of the connector is straight** and that points A and B are directly in line.

Your BFM® fitting is now ready to go.

Removal:



01.

Insert the removal tool in the opening of the hole and push towards the center of the fitting.



02.

Hold the seal of the connector and remove from the spigot.

CAUTION!

It is important when installing or removing the TR fitting to keep your fingers clear of the seal as it snaps into place with force.

Your spigots are now ready for a new connector.